

**NOMENCLATURE OF ELECTRIC ACTUATORS**



<b>ERQT 1530</b>		<b>1</b>		<b>2</b>			<b>1</b>	<b>1</b>	<b>01</b>	<b>230VAC</b>
Actuator Model Reference	Signal Interface/Control Type			Auxiliary Switches			Potentiometer	Max. Rotation	Potentiometer Resolution in Ohms (Ω)	Supply Voltage
				With Basic / Changeover (CO) Contact	With <i>f</i> -CON [(0)4-20mA/ Intelligent Control]	With Local Station for Auto/Manual Operation				
ERQT 0815	1- Basic / Change Over (CO) Contact	2- <i>f</i> -CON [(0)4-20mA/ Intelligent Control]	3- Basic with Local Station for Auto/Manual operation	0/1/2/3/4 (Max. 4 nos.)	0/1/2 (Max. 2 nos.)	0/1/2 (Max. 2 nos.)	0 - NA 1- APL	1 - 90° 2 - 180°	00 - NA 01 - 1 KΩ 02 - 5 KΩ 03 - 10 KΩ	230VAC 110VAC
ERQT 0830										
<b>ERQT 1530</b>										
ERQT 1560										
ERQT 3030				0/1/2 (Max. 2 nos.)						
ERQT 3060										

ERQT 15XX  
\*ERQT 30XX

**Notes:**

- 1) For Models ERQT **0815/0830/1530/1560** with (0)4-20 mA/Intelligent Control interface *f*-CON, should be construed/stated as *f*-CON1 and for Models ERQT **3030/3060** with (0)4-20 mA/Intelligent Control interface *f*-CON, should be construed/stated as *f*-CON2.
- 2) For **Basic** Models ERQT **0815/0830/1530/1560** - **Max. 4 nos.** and for Models ERQT **3030/3060** **Max. 2 nos.** of Auxiliary Switches can be provided. For **Intelligent Control** Models ERQT **0815/0830/1530/1560/3030/3060** - **Max. 2 nos.** of Auxiliary Switches can be provided. For **Basic with Local Station** option Models ERQT **0815/0830/1530/1560/3030/3060** - **Max. 2 nos.** of Auxiliary Switches can be provided. For **Basic** Models ERQT **0815/0830/1530/1560**, set up for **180°** rotation; a maximum of **2 nos. of** Auxiliary Switches can be provided along with Potentiometer.
- 3) Potentiometer as an accessory/option for OHMIC position feedback can be offered with basic versions only; is not applicable (00/NA) for **Intelligent Control** versions. Actuators with *f*-CON Intelligent Control, provide (0)4-20 mA feedback, built-in, as standard.

Example 1: **ERQT 1530 -1-2-1-1-01, 230VAC** should be interpreted as follows:

**ERQT 1530**- Actuator Model Reference, **1**- Basic PCB Card, **2**- 2 nos. Auxiliary Switches, **1**- Potentiometer Applicable, **1**- 90° Rotation, **01**- 1 KΩ Potentiometer resolution, **230 VAC**- Supply Voltage

Example 2: **ERQT 3060-3-2-1-1-01, 230VAC** should be interpreted as follows:

**ERQT 3060**- Actuator Model Reference, **3**- Basic PCB Card incorporating Local Station for Auto/Manual operation, **2**- 2 nos. Auxiliary Switches, **1**- Potentiometer Applicable, **1**- 90° Rotation, **01**- 1 KΩ Potentiometer resolution, **230 VAC**- Supply Voltage

**\*Actuators ERQT 0815/0830/1530 & 1560 despite their varied torque ratings and cycle times have the same external dimensions -are collectively referred to as ERQT 15XX; likewise, ERQT3030 & 3060 are clubbed as ERQT 30XX.**

13042023